



GEA MPU 150 Gas Purge Unit Operating Instructions



The purge unit is designed for the direct purging of pipework up to 150 mm bore from air to low pressure natural gas. It can also be used for natural gas to air purging but an air mover must be used which is available as an optional extra item. Larger Purge Units for above 150 mm bore pipework are also available. Please contact GEA for more information.

The MPU unit can also be used for setting up meter regulators under flow conditions.

All Soundness Testing and Purging must be carried out as set down in Institution of Gas Engineers and Managers publications UP/1, or UP/1A if the volume is less than 1 cubic metre [35.3 cubic feet] and the operating pressure is below 40 mbar.

The unit is mounted in a vinyl-coated wooden and aluminium framed box that should be stable under reasonable conditions if on a firm base. The box is not intended to be left outside for long periods and should be stored in the dry. The complete assembly weighs less than 25kg, lift **only** by the two side handles using the correct manual handling / lifting procedures. Do not lift using any door handle.

A valved test point is included for the connection of a Gas Analyser such as a Gascoseeker. The flow meter measures the gas velocity at a flow as given in UP/1A and can be used for pipework up to and including 150mm [6"] bore.

No Smoking signs are attached to the box and it may be wise to use red and white Barrier Tape to keep people more than 5 metres from the Purge Unit, which must be located in a safe place. Always keep a fire extinguisher handy. A **Danger** sign is also provided for the installation pipework purge connection.

The left hand riser containing the meter can be used without erecting the right hand purge stack for pipe sizes up to 100mm. Ensure the right hand valve is closed for single stack purging. A 1" bsp plug is supplied for the end of the unused outlet.


Assembly

The door must be opened out to give the box stability. The length of hose should be carefully removed from the box and connected to the union at the lower right hand side of the box and to the installation pipework. Do not over-tighten the union as it should achieve gas tightness quite easily if not damaged. Additional lengths of hose are available. Check the hose each time it is used to see that it is in good condition. Check the connection inside the building with leak detection fluid.



If a purge is to take place for pipework upto 100mm, remove three plastic vent uprights from the door clips. Unscrew the flame trap from the 1" socket in the base of the box and screw in by hand to the top part of upper vent stack. Screw three pieces together and screw in by hand to the 1" elbow from the left hand meter riser in the 'top' of the box. The flame trap is now over 2.5m above ground level.

If a 150mm pipe is to be purged, assemble as above and also remove the other three vent pipes and flame trap, erecting as before but now also to the right hand riser. Two stacks and flame traps are needed for 150mm pipework.

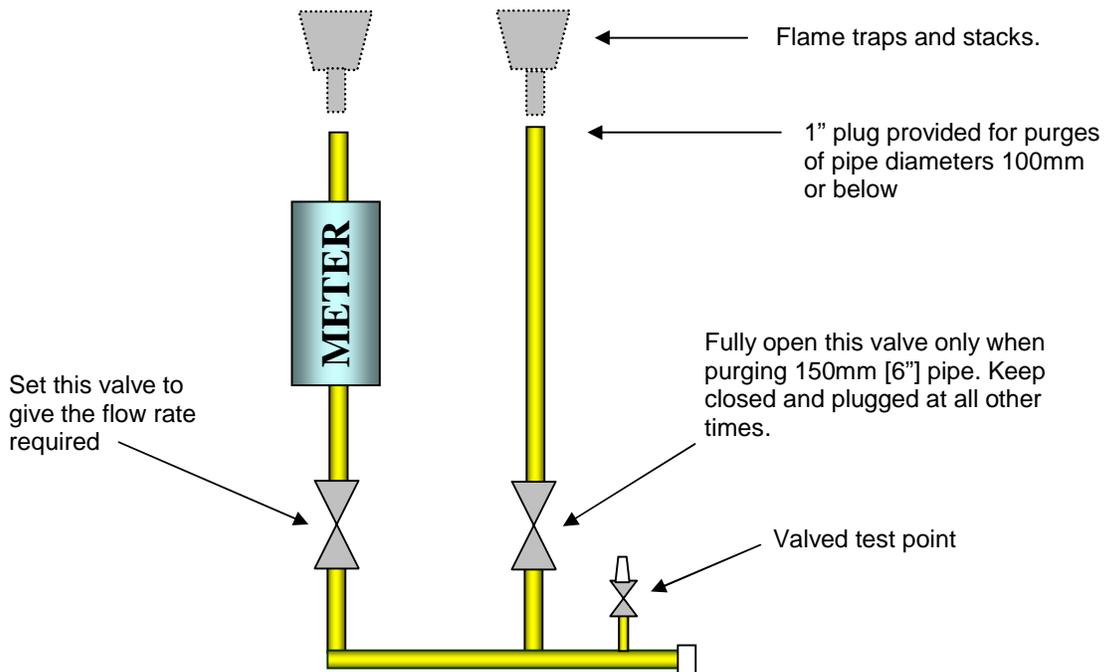

On completion of the work, replace the 28mm pipes in their clips in the box. Expose the disconnected Purge Hose to the open air for a few minutes to vent out the gas and then carefully wind the Purge Hose into the box. If it is extremely cold, the Hose may be too stiff to safely get back inside without damage to the box. Replace the flame traps into their 1" sockets in the box.

Operation

Direct gas to air or air to gas purge operation is detailed in IGEM UP/1 and UP/1A.

Verify that the pipe size to the purge connection is large enough to provide the purge flow rate at line gas pressure [below 50mbar] and without excess pressure drops. If the meter sizes are correct and the purge rate cannot be obtained, the pipe to the purge point is too small. If possible, move the purge connection to a larger section of pipe and purge to that point before finishing the purge on



the original smaller pipe. **If this is not practicable, a purge with nitrogen according to UP/1 must be carried out.**


For correct purging to The Institution of Gas Engineers and Managers (IGEM) UP/1, 1A an optimum flow rate is required and this can be easily set by the 1" full bore manual valve inside the Purge Unit. A flow rate of below **3 cubic metres per hour** will be adequate for pipe sizes **below 50mm [2"] bore**. **Keep the right hand valve fully closed for all purges up to 100mm.**

For **50 mm [2"] bore** set the left hand control valve to give a flow of **4.5 m³/h**. The primary meter must be U6 rating or larger.

For **80 mm [3"] bore** set the left hand control valve to give a flow of **11 m³/h**. The primary meter must be U16 rating or larger.

For **100 mm [4"] bore** set the left hand control valve to give a flow of **20 m³/h**. The primary meter must be at least U16 rating.

For **150mm bore**, fully open the right hand valve and set the left hand control valve to give a flow reading of **10 m³/h**. This gives a purge flow in excess of the required **38 m³/h**. The primary meter must be at least U40 rating.

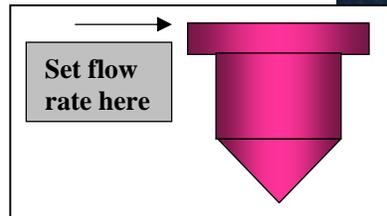

The purge gases may be tested with a methane analyser after 30 seconds of flow. The purge should be completed after a time in seconds equal to about 1.5 to 3 times the full length of the pipe plus any installed 'U' meter and hose in metres. For example, a 25m length of pipe, U16 meter [20m equiv] and the 5m of purge hose should purge in about 75 to 150 seconds at the correct flow rate for the largest pipe being purged. Where a 'U' meter is installed add 20m for U16 & 25, 30m for U40 & 60, and 35m for U100 & 160.

The methane analyser should register around 90% at the completion of the purge, depending in the exact characteristics of the gas.

During the purge to gas, the flow rate may change. This is normal and is caused by the change in specific gravity as the flow of air is replaced by the lighter gas. This flow is above that necessary but speeds the purge operation. Conversely, when purging from gas to air, the flow will change and



must be adjusted upwards to maintain the ideal minimum velocity.

It should not be necessary with this design of unit to monitor the gas pressure during purging since the indication of correct flow on the meter shows that adequate pressure exists. Please note that if an electronic gauge is used it must be intrinsically safe if used in flammable environments. Do not forget to have any test instrumentation checked and calibrated at least annually.

Never attempt to light the purge gases on the Flame Trap.

On completion of a successful purge to gas, you should have achieved at least 90% methane. Higher levels may not be possible due to the constituents of the gas itself.

When removing redundant pipework and gas meters it is essential to purge to air and to get less than 40% LFL or more than 20.5% oxygen. An optional airflow mover is available for gas to air purges.

**All removed components must be capped or sealed correctly.
Open ended pipework must not be left.**

Finally, replace the parts in their clips in the box. Expose the disconnected Purge Hose to the open air for several minutes to vent out the gas and then carefully wind the Purge Hose into the box. If it is extremely cold, the Hose may be too stiff to safely get back inside without damage to the box. Replace the flame traps onto their 1" sockets in the base of the box.